

IntelliVISION

MATTEL ELECTRONICS

**STEP-BY-STEP ASSEMBLY GUIDE
OF THE INTELLIVISION BOX REPLICA**

Dear collector!

Thank you very much for purchasing the Intellivision Box Replicas. These replicas are the only inexpensive way to your complete collection of Intellivision games.

Some of you might decide never to assemble the boxes but leave them flat as nice collector's items. You can throw away this guide.

All others please read the instructions carefully to make sure that the process of assembling leads to a pristine close-to-the-original Intellivision box set.

Many thanks to David Harley for encouraging me to manage this difficult project.

And special thanks to Casey Nydahl for providing the hi-res scans of his games.

Feel free to use all pictures and information for any Intellivision related purpose, but please indicate its origin.

Send your questions, comments and suggestions to:
intellivision@oliver-puschatzki.de

-Oliver Puschatzki (January 2008)

This is how the box replicas will be delivered.

There are three double-sided adhesive tape strips already applied on the box. It is high-quality transparent tape which will hold the box together tightly. Do not remove the brown cover until being told to do so later in this guide.

You will need a well-lit workplace and a pair of calm hands.



STEP 1

Fold the box as show in this picture:




What you see here on the right side is the game cartridge retention system. It will be inside the box when the assembling process is finished and will hold the cartridge in place.

Remove the long brown (non-adhesive) tape from the retention system, take any original Intellivision cart and fold the retention system around the edge of the cartridge. Be careful and make sure that there is a 90° angle (more or less) on both sides of the retention system. Press down the retention system gently to affix it.




STEP 3

Remove the brown cover tape from the small piece of the retention system. Bring the edge of the box (see red arrow) in an upright position (90° angle) and attach the small part of the retention system to the box.

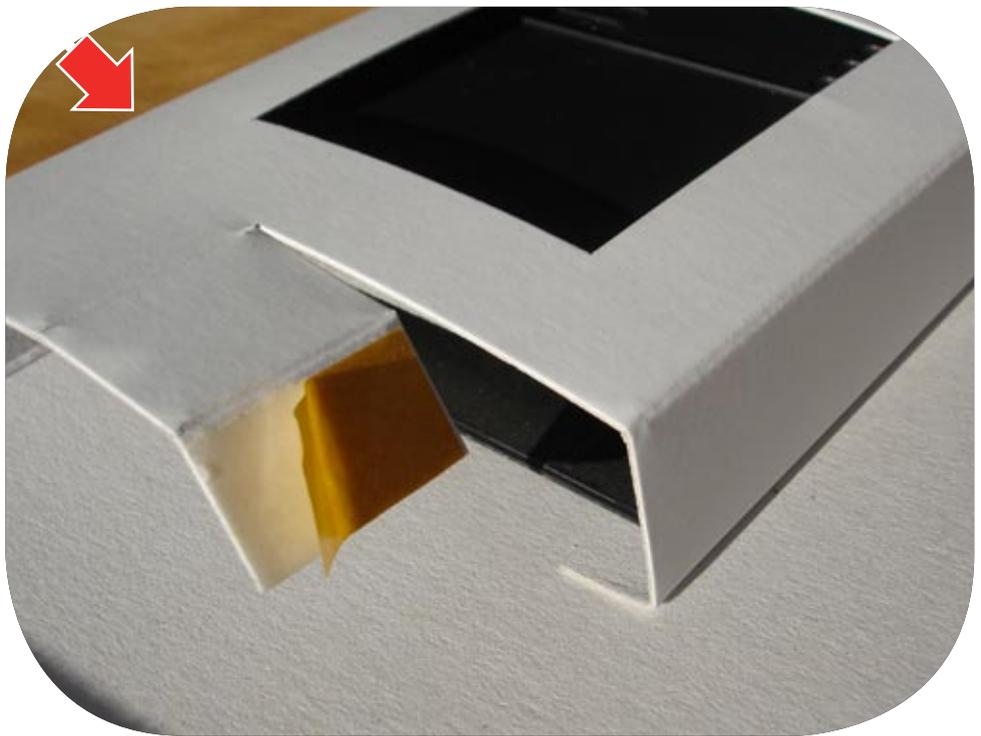

Remove the cartridge and press all parts of adhesive tape of the retention system firmly to the box.

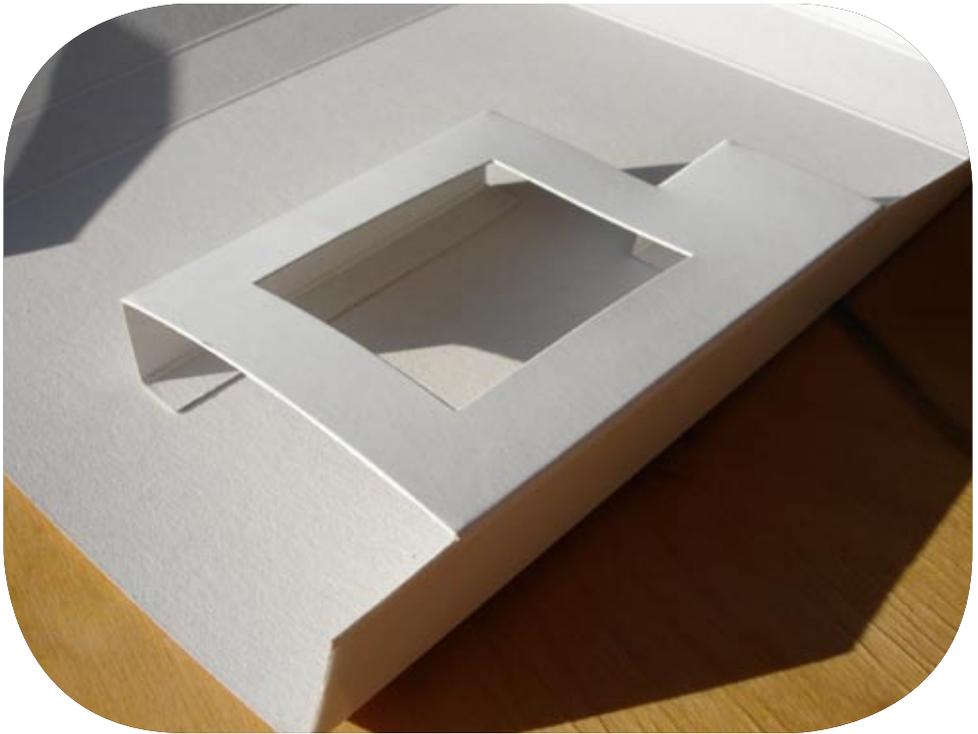

STEP 5

Now comes the most difficult part of assembly. Position the side of the box correctly on the adhesive tape. If you are unsure which is the correct position, try it out with the brown (non-adhesive) tape still attached. If you have found the correct position, remove the brown tape and attach a small area of the side to the adhesive tape.




Position the rest of the side correctly and press the cardboard together firmly. Be sure to position it absolutely correct, because you will not be able to adjust it afterwards.



STEP 7

Now put your loose cartridge into the box, throw the manual in and close the flaps.

When you open the box, you will feel like you are in the 80's...

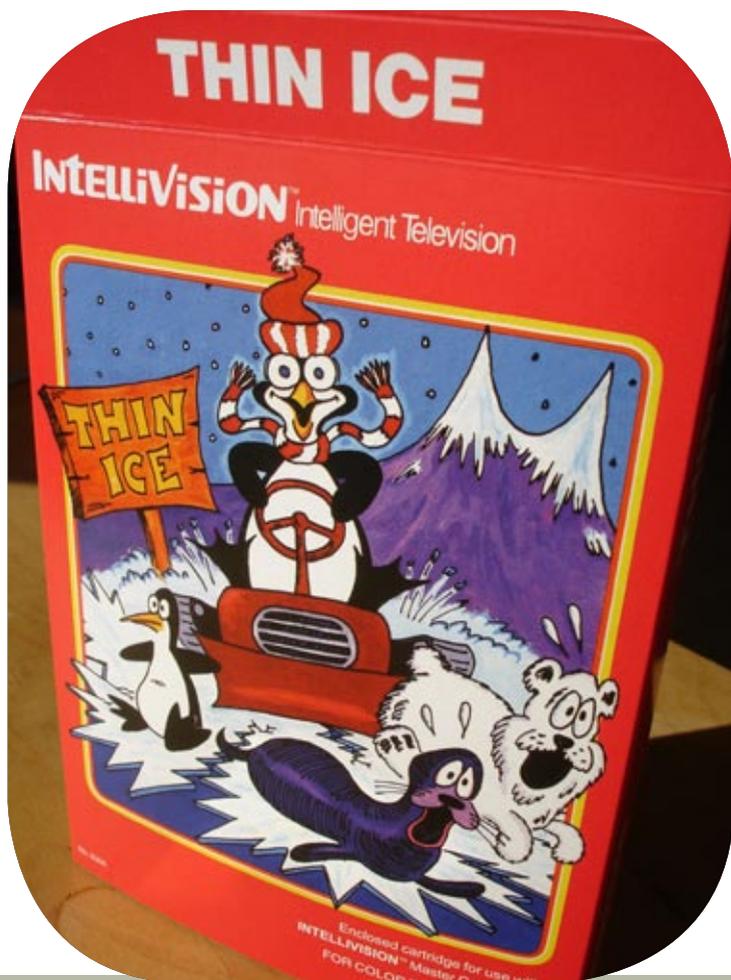

Available sets (as of January 2008):

Set1: Body Slam Super Pro Wrestling
Spiker! Super Pro Volleyball
Congo Bongo
Learning Fun II
Thin Ice
World Series Major League Baseball

This guide is subject to change without notice.